Manualslib.com - The Global Manuals Library

RCA L46WD250 QUICK START MANUAL

Table of Contents

choose your connections
Connect a Signal Source
Set Up Your TV
Operate Your TV
Using the Menu System
Watching TV
Changing Channels
Entering Channel Numbers
Changing Screen Formats
Viewing Devices Connected to Your TV
Other ManualsLib Projects

QUICK START GUIDE

RCA

www.rca.com/television

Choose Your Connections

Make your connection decision easier by taking a few minutes to review the jacks on your new TV. Compare the jacks on the device you want to connect and see if the same jacks are available on your TV. Then refer to the chart below to determine the best connection to make.

For more information about connecting your TV to other devices, refer to Chapter 1 of the User's Guide. Make sure you read the safety information provided at the beginning of the User's Guide before you connect and operate your TV.

Jacks	Quality	Connects to...	Cables needed (not included)
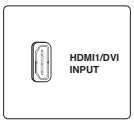	★★★★	Devices with an HDMI™ or a DVI output, such as Satellite Receivers and Cable Boxes	HDMI Or if connecting to a DVI device, use these with an HDMI cable Audio + DVI Adapter
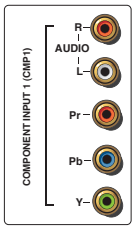	★★★	Devices with Y Pb Pr (component) outputs, such as Satellite Receivers, Cable Boxes, PVRs, and DVD Players	 Audio  Component Video
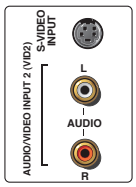 (located on the side)	★★	Devices with S-Video or Video (composite) outputs, such as DVD Players, VCRs, Satellite Receivers, and Cable Boxes	S-Video  Audio
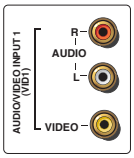	★		 Audio Video

1 Connect a Signal Source

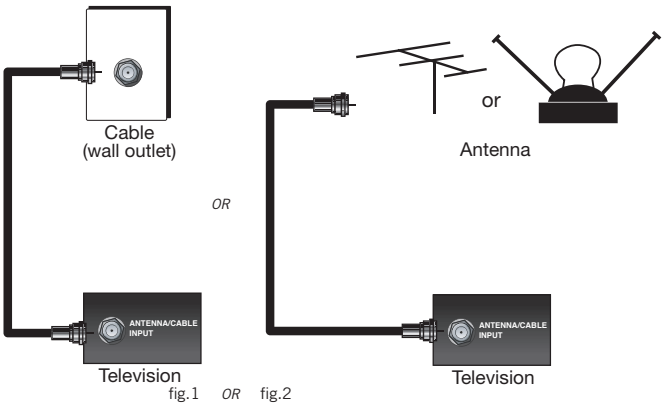

fig.1 *OR* fig.2

Connect your TV to cable or an antenna in order to receive TV channels. Connect the cables as shown in fig.1 or fig.2.

> *Note: If you have regular cable, your TV is able to receive some digital channels because it has a capability called QAM. QAM is a tuner that enables reception of unscrambled digital cable content. Check with your cable provider for information about content availability in your area. Refer to Step 3, Operate Your TV, for information on viewing digital channels.*

If you're connecting a cable box or satellite receiver use the chart above to help determine which jacks to use for the best connection. Your cable box or satellite receiver needs to be high definition if you want to receive high definition programming. Check with your cable provider for more information.

Continue to Step 2, *Set Up Your TV*, on the back page.

RCA and associated marks are trademarks of THOMSON S.A. used under license to TTE Corporation.
HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

2 Set Up Your TV

Make sure you have already connected your TV to devices and a signal source, plugged in the TV, and put batteries in the remote.

Now, turn on the TV and start the setup.

• **Set the Menu Language.** Press OK to select *English* and continue to the next step. Press the down arrow button to choose another language for the menu system and then press OK.

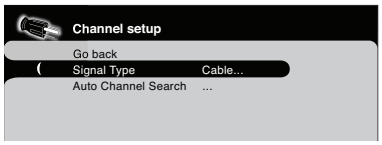

• **Choose the Signal Source.** Press the right arrow button to select *Cable* or *Antenna*. Press the down arrow button to highlight *Auto Channel Search*. Go to *Complete the Channel Search* below.

• **Complete the Channel Search.** With *Auto Channel Search* highlighted, press OK to begin the channel search.

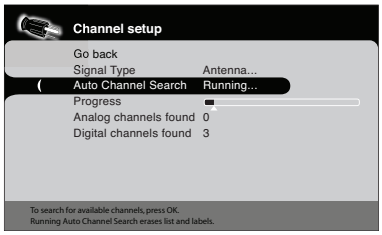

There are several things to be aware of when the TV's searches for channels.

If you chose Cable as your signal type, the search takes a while because it's looking for analog and digital channels, and then it's removing scrambled channels found. Here is what happens during the search:

1. The search first looks for digital channels and places the number of channels found next to *Digital Channels found*. This number will probably seem like a lot. This is because the number includes both scrambled (for example, Pay Per View) and non-scrambled channels. These channels are dependent upon what your cable company is sending.
2. The search then looks for analog channels and places the number of channels found next to *Analog Channels found*.
3. The search might appear as if it is complete, but as long as the search says *Running*, it is still in progress. What's happening at this point is the TV is removing scrambled channels from the channel list. When the search is finally complete, the Channel setup menu will look as the picture to the left shows. To exit the menu system, press CLEAR.

3 Operate Your TV

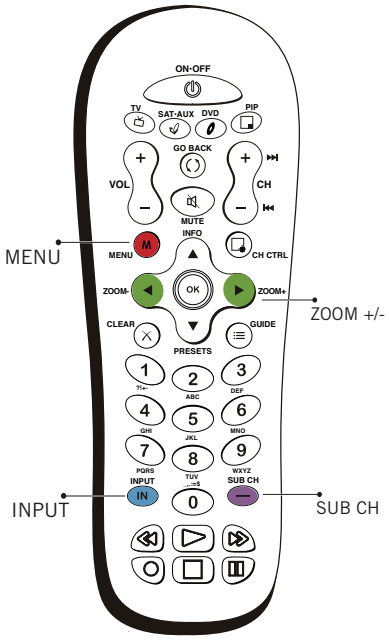

Using the Menu System

To access the menu system, press the **MENU** button. Use the up or down arrow buttons to scroll up or down; left or right arrow buttons to scroll left or right, or to navigate submenus; and OK to change selections. Press MENU to exit a menu.

Watching TV

Changing Channels

- If you have both analog and digital cable channels these will be put into the same channel list. When you change channels, look for an *A* at the bottom of the screen to see if you're viewing an analog channel; look for a *D* to see if you're viewing a digital channel.
- Depending upon the type of signals you have connected to your HDTV, you might notice the channels change slower than you're used to. This is perfectly normal. Digital channels sometimes take longer to tune.

Entering Channel Numbers

To tune to a channel, enter the channel number and press OK or wait a few seconds for the channel to tune. Digital channels can have both primary channels (like the analog channel number) and subchannels. If 6 is the primary channel and 1 is the subchannel, for example, the channel looks like *6.1* on screen. To tune to a digital channel with a subchannel, such as 6.1, enter the primary channel number (6), then press the **SUB CH** button. Enter the subchannel number (1) and press OK.

Changing Screen Formats

Your TV allows you to change the format of the picture you're viewing by pressing the **ZOOM +/-** button on your remote. Depending on the type of signal you're viewing, you might not be able to change the format.

Viewing Devices Connected to Your TV

To view devices connected to your TV, press the **INPUT** button to toggle through the inputs. Choose the input name that matches the input of the device you connected. Your choices are *VID1, VID2, CMP1, CMP2, VGA, HDMI1,* and *HDMI2.*

Thank you for your purchase. Before making a trip back to the retailer, please visit www.rca.com/television for more information or contact us at 1-800-336-1900 so that we may assist you in operating the unit, replacing missing parts, and ensuring your satisfaction with the product.

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages